

THANK YOU FOR PURCHASING THE INCREDIBLE DAP XHOSE®PRO

The DAP XHOSE[®]*PRO* is a revolutionary hose that automatically expands up to 3 times its original length when the water is turned on and automatically contracts back when the water is turned off. The XHOSE[®]*PRO* is the next generation of the original DAP Xhose expanding hose. The XHOSE[®]*PRO* has solid brass fittings, a ³/₄" diameter, a durable outer fabric webbing and is extremely lightweight. The XHOSE[®]*PRO* is great for professionals and homeowners and will eliminate the drudgery of using heavy, bulky conventional hoses.



PLEASE READ ALL OF THE IMPORTANT INFORMATION BELOW BEFORE USING YOUR DAP XHOSE®PRO

INSTRUCTIONS:

- 1. Before using your **X**HOSE[®]*PRO* place the rubber washer firmly inside the female coupling. This will prevent leaking..
- 2. Attach the female end of the XHOSE[®]*PRO* to the water source.
- 3. Turn the on/off valve to the OFF position.
- 4. Turn the water on at the source. Gradually increase the water pressure. The XHOSE[®]PRO will automatically expand up to 3 times its original length. NOTE: When using the XHOSE[®]PRO for the first time, it is recommended to first fill and extend hose and slightly stretch hose to release tightness in outer folded material covering. Then release water and refill to use normally.
- 5. When the **X**HOSE[®]*PRO* is fully expanded turn the on/off valve to the ON position. You can now use the **X**HOSE[®]*PRO* like any ordinary hose
- 6. When you are finished using the XHOSE[®]*PRO*, turn the water OFF at the source spigot.
- 7. Allow the water in the XHOSE[®]*PRO* to drain by turning the on/off valve to the ON position. If you are using a nozzle then open the nozzle. As the water begins to drain, the XHOSE[®]*PRO* will automatically contract back to its original length.

IMPORTANT: This hose is intended for routine watering applications

- This hose should be used with a spray nozzle.
- Do not run hot water through this hose
- Do not leave the water turned ON and the hose under pressure when not in use.
- Drain your hose in the summer when you are not using it and keep it shaded as much as possible.
- Protect your hose from harsh winter weather by storing it indoors. Be sure to drain the hose completely before storage as water remaining in the hose can freeze, damaging the hose.
- Do not allow children to play with or near this product.
- Always hold the hose from the fittings or a spray nozzle when using, expanding, or contracting.
- Always hold the brass male end firmly when draining the hose

MADE IN CHINA


U.S. Patent No. 8,291,941 B1 and 8,291,842 B2 and 8,479,776 and other patents pending



PLEASE READ ALL OF THE IMPORTANT INFORMATION ON THE REVERSE SIDE AND BELOW BEFORE USING YOUR DAP XHOSE®PRO

INSTRUCTIONS for using your DAP XHOSE[®]*PRO* with a SPRINKLER

- 1. Turn the ON / OFF value at the end of your XHOSE[®]*PRO* to the OFF position.
- 2. Turn the water on at the source and your XHOSE[®]PRO will expand to its maximum length. When using the XHOSE[®]PRO for the first time, it is recommended to first fill and extend hose and slightly stretch hose to release tightness in outer folded fabric covering. Then release water and refill to use normally.
- 3. Attach your sprinkler to the male end with the attached ON / OFF valve.
- 4. Place your sprinkler in the desired place in your yard or garden
- 5. Point the sprinkler nozzle away from you and turn the ON / OFF valve to the ON position and walk away. Your sprinkler will work the same way it works with any ordinary hose. NOTE: if you are using a sprinkler that is NOT attached to the ground, (such as an oscillating sprinkler), when you turn the water OFF, your sprinkler may be dragged a short distance as the XHOSE[®]PRO contracts back to its original length. This should not harm your XHOSE[®]PRO or your sprinkler.

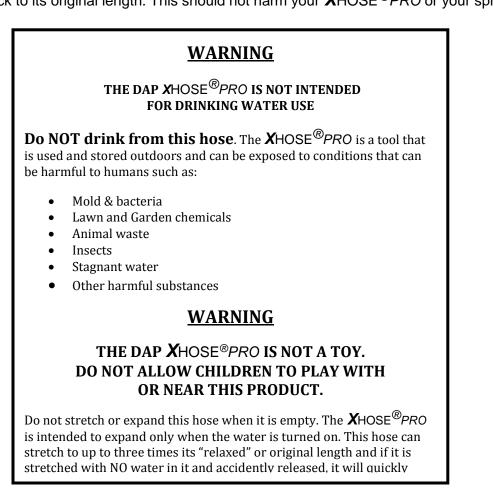

www.xhosepro.com